



DL  
600  
800


**1** Insert the bottom section of the carbon rods into the base

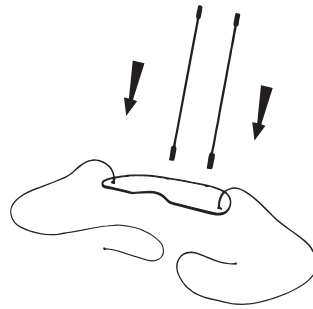


**2** Make sure they are fully pushed home

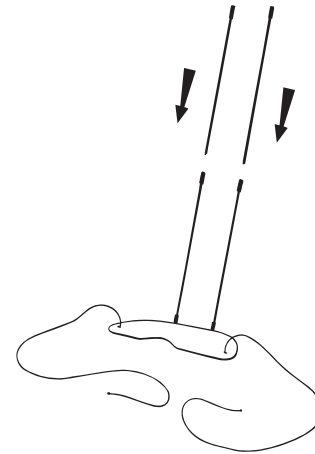

**3** Do the same for the following rods

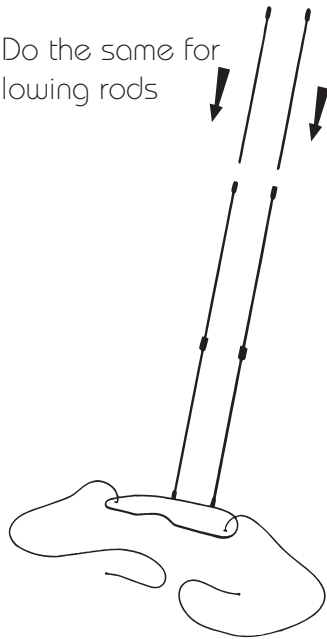


**4**

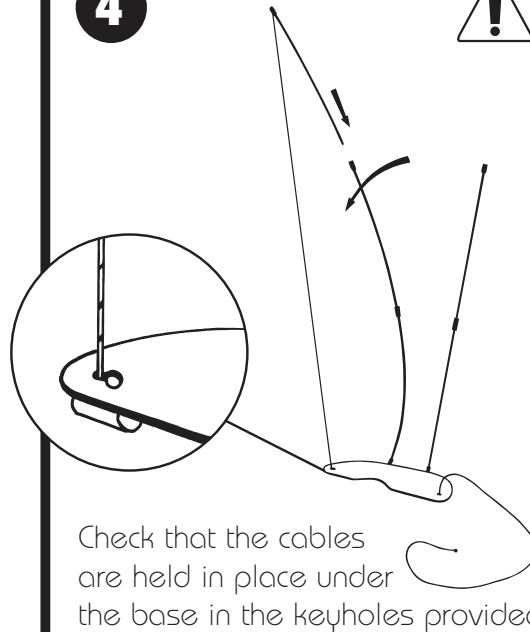

Check that the cables are held in place under the base in the keyholes provided

**5**

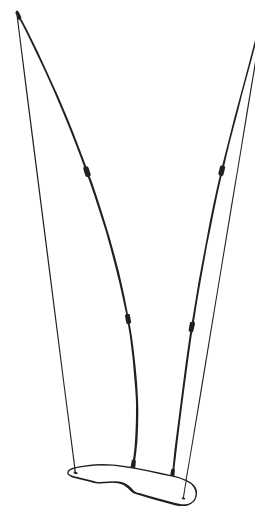

**6**

